



VC-Strip™ User Manual

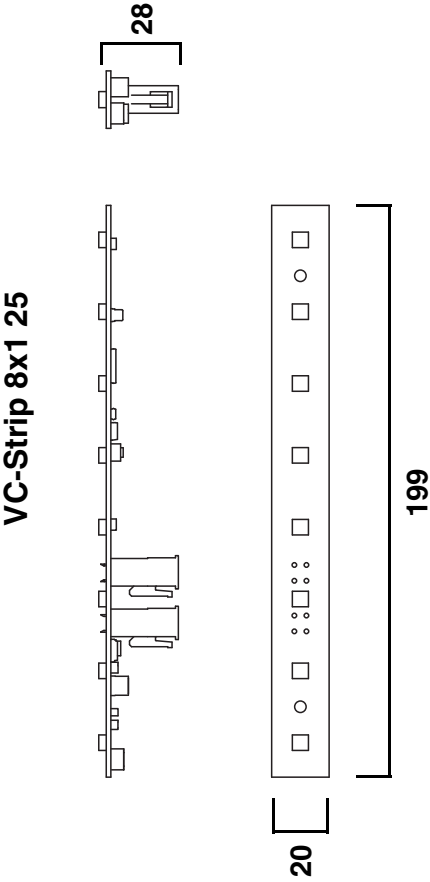

Dimensions

All measurements are expressed in millimeters

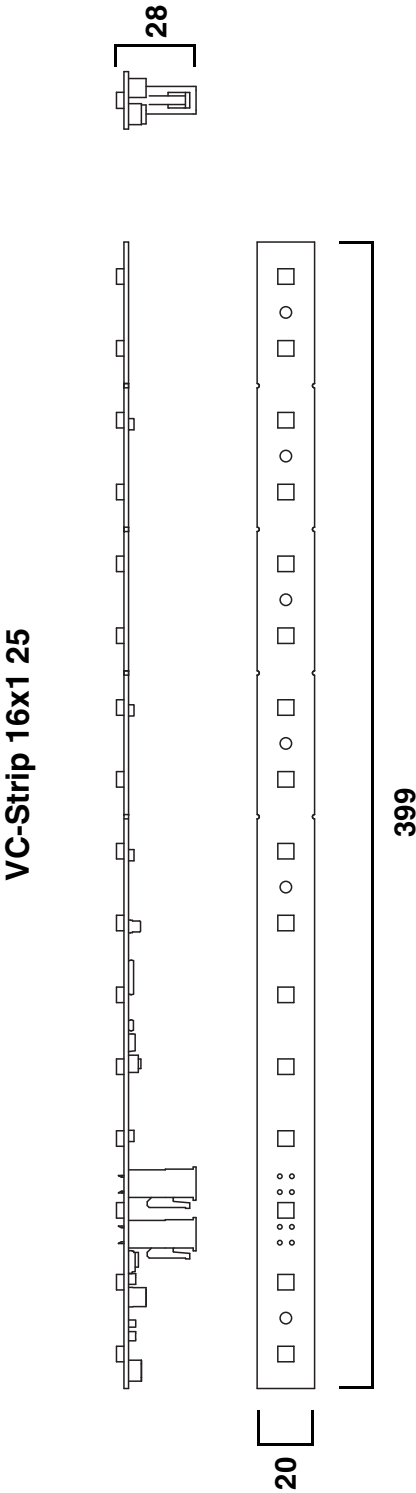

Contents

Safety Information	4
Introduction	6
Electrostatic discharge precautions	6
Unpacking	6
VC-Strip™ overview	7
Physical installation	8
Shortening 16x1 modules	8
System installation	10
Installing a P3 system	10
Installing a DMX-controlled system	12
Connecting additional devices to a VC-Strip chain	15
System setup	16
Setting up for P3 display	16
Setting up for DMX control	16
Setting up shortened modules	18
Using the VC-Strip	19
P3 display	19
DMX control	19
Local control button	19
Service and maintenance	22
Cleaning	22
Installing new software	22
Troubleshooting	23
Specifications	24

Safety Information



WARNING!
Read the safety precautions in this section before installing, powering, operating or servicing this product.

The following symbols are used to identify important safety information on the product and in this document:



Warning!
Safety hazard.
Risk of severe injury or death.



Warning!
Hazardous voltage. Risk of severe or lethal electric shock.



Warning!
Fire hazard.



Warning!
Refer to manual before installing, powering or servicing.



Warning! Read this user manual before installing and operating the Martin VC-Strip™ and keep this manual for future reference.



Warning! The VC-Strip is designed to integrate with other Martin™ devices in a video display installation. Follow the safety precautions given not only in this user manual but also in the manuals of all the devices you connect to it. Observe all warnings given in the manuals and printed on devices. Install, connect and operate devices only as described in this manual and each device's manual and only in accordance with local laws and regulations. All Martin™ manuals are supplied with devices and also available for download from www.martin.com.

Warning! The VC-Strip is not for household use. It presents risks of severe injury or death due to fire and burn hazards, electric shock and falls. It must be installed by qualified technicians only.

Warning! The VC-Strip does not have user-serviceable parts. Refer any operation not described in this manual to Martin™ or its authorized service agents.

Important! The VC-Strip is not designed to allow hot-plugging. Shut down power and data before connecting or disconnecting modules.

If you have any questions about how to operate the VC-Strip safely, please contact your Martin™ supplier or call the Martin™ 24-hour service hotline on +45 8740 0000, or in the USA on 1-888-tech-180.



PROTECTION FROM ELECTRIC SHOCK

- Connect the VC-Strip only to the Martin™ devices specified and installed as directed in this user manual.
- Check and respect the directions given in the user manuals of all the devices that you intend to connect to the VC-Strip, particularly the instructions, warnings and limits that apply to:
 - system layout,
 - connections to other devices,
 - specified cables,
 - maximum cable lengths, and
 - maximum number of devices that can be connected.
- Use only the cables specified by Martin™ for the devices concerned to interconnect them. If the specified cables are not long enough for an intended cable run, consult Martin™ for assistance in finding or creating a safe alternative cable

- Respect the following safety limits:
 - Never connect more than forty-five (45) VC-Strip 16x1 modules or sixty-three (63) VC-Strip 8x1 modules in one linked chain.
 - If you supply VC-Strip modules with DC power from a **Martin P3 PowerPort 1500™**, do not create a linked chain that contains more than forty-five (45) VC-Strip 16x1 modules or sixty-three (63) VC-Strip 8x1 modules. Do not connect more than one linked chain of VC-Strips to one output from a P3 PowerPort 1500.
 - If you supply VC-Strip modules with DC power from a **Martin Tripix Power IP66™**, do not create a linked chain that contains more than thirty (30) VC-Strip 16x1 modules or forty-two (42) VC-Strip 8x1 modules. Do not connect more than one linked chain of VC-Strips to the DC power output of a Tripix Power IP66.
 - If you supply VC-Strip modules with DC power from a **generic 48 VDC external PSU** (power supply unit), do not create a linked chain of modules that will exceed the maximum power rating of the PSU output used to supply that chain with power. Allow 8 W per module in a chain of VC-Strip 16x1 modules and 4 W per module in a chain of VC-Strip 8x1 modules.

Each time you reach the maximum permitted number of VC-Strip modules – or the PSU output's maximum power rating if you reach that power rating first – you must create a new chain of modules that is connected to a new 48 VDC power output.

- Do not allow the total length of the cables used in a linked chain of VC-Strip modules to exceed 50 m (164 ft.) from the 48 VDC power source (Martin P3 PowerPort 1500™, Martin Tripix Power IP66™ or other external PSU) to the last VC-Strip at the end of the chain.
- Provide a means of locking out AC mains power that allows power to the installation to be shut down and made impossible to reapply, even accidentally, during work on the installation.
- Shut down power to the installation during service and when it is not in use.
- Before applying power to the installation, check that all power distribution equipment and cables are in perfect condition and rated for the current requirements of all connected devices.
- Isolate the installation from power immediately if any product, power cable or power plug is in any way damaged, defective or wet, or if it shows signs of overheating.
- Do not expose the VC-Strip to rain or moisture.



PROTECTION FROM BURNS AND FIRE

- Provide free airflow and a minimum clearance of 10 mm (0.4 in.) around the front of the VC-Strip.
- Do not operate the VC-Strip if the ambient temperature (T_a) exceeds 45° C (113° F).
- Do not modify the VC-Strip in any way not described in this manual or install other than genuine Martin™ parts. Use only accessories approved by Martin™.



PROTECTION FROM INJURY

- When installing the VC-Strip above ground level, ensure that the installation hardware and supporting structure can hold at least 10 times the weight of all the devices they support.
- In an overhead installation or where the VC-Strip may cause injury if it falls:
 - block access below the work area and work from a stable platform whenever installing, servicing or moving the VC-Strip, and
 - as soon as work is completed, check that all hardware and components are securely in place and fastened to supporting structures.

Introduction

Thank you for selecting the Martin VC-Strip™. This compact LED-based display module is designed to integrate into a Martin P3™ video system and can also be controlled using DMX.

The VC-Strip combines flexibility and simplicity with high-quality video display capabilities. Used with or without a front diffuser, multiple VC-Strips can be combined in ways that give exceptional creative flexibility. A hybrid power and data cabling system allows VC-Strips to be daisy-chained for easy setup and minimal cabling.

The VC-Strip is an array of LEDs arranged in a line on a rigid module. It offers the following features:

- 25 mm pixel pitch (center-to-center LED distance)
- Individually controllable pixels
- 4000 nits brightness (calibrated mode)
- High-quality 16-bit per color image processing technology
- Pixel-level brightness and color calibration for optimal image quality
- P3 and DMX control with automatic protocol detection
- Intuitive pixel mapping and addressing using a Martin P3™ system controller
- Single hybrid cable for power and data input and throughput
- External power and data processor (Martin P3 PowerPort 1500™) and simple cabling system

The VC-Strip is available in eight models. Two lengths are available:

- VC-Strip 16x1 25™ with 16 LEDs per module
- VC-Strip 8x1 25™ with 8 LEDs per module

and each length is available in RGB, warm white (WW), medium white (MW) and cool white (CW) models.

Martin™ user documentation is supplied with products and available for download from the Martin™ website at <http://www.martin.com>, where you can also find the latest specifications, firmware updates and support information for all Martin™ products.

Martin™ welcomes input from users. Comments or suggestions regarding this manual can be e-mailed to service@martin.dk or posted to: Technical Documentation, Martin Professional A/S, Olof Palmes Allé 18, DK-8200 Aarhus N, Denmark.

Electrostatic discharge precautions




Important! Components on the VC-Strip are sensitive to damage by ESD (electrostatic discharge). Take the following precautions:

- **Store the VC-Strip only in its ESD shielding bag and do not remove it until you are ready to install it, and return it to its ESD shielding bag immediately if you remove it from an installation. Place it on grounded (earthed) surfaces only.**
- **Hold the VC-Strip only by its edges. Avoid touching conductive surfaces. Avoid touching components apart from the connectors and the control button. Avoid touching connector pins.**
- **Attach an ESD wrist strap to your wrist and connect its ground (earth) lead to a known ground (earth) before handling the VC-Strip.**

Unpacking

The VC-Strip is supplied in anti-static packaging. Leave products in their packaging until you are ready to install them.

VC-Strip™ overview

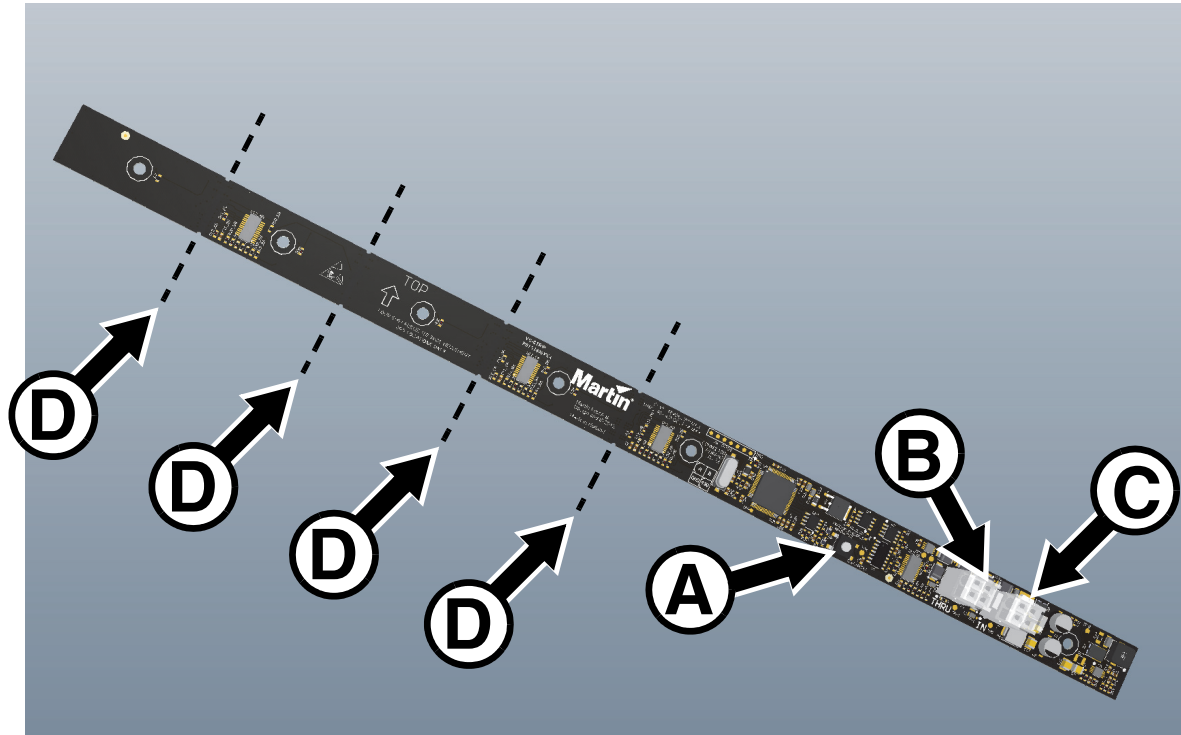

- A - Control button
- B - 48 VDC power + data throughput (THRU)
- C - 48 VDC power + data input (IN)
- D - Module cutting points (VC-Strip 16x1 25™ only)

Figure 1: Overview

Physical installation

The VC-Strip can be installed in any orientation. The most evenly matched optical characteristics when viewing an installation from the side at an angle are obtained when all VC-Strip modules are oriented horizontally, but unevenness will hardly be noticeable in vertical strips, and then only when viewed from the side.

The backs of modules are marked with arrows and the word **TOP**. Install all modules with the arrows facing the same way. When installing horizontally, install all modules with the arrows pointing upwards and the **TOP** marking at the upper edge of the modules.

Allow free airflow around the product and at least 10 mm (0.4 in.) of clearance around the LEDs on the front surface.

To maintain 25 mm pixel spacing across multiple VC-Strip modules so that they form a seamless display surface, install them with a 1 mm (0.04 in.) gap between ends and 5 mm (0.2 in.) gap between sides of modules.

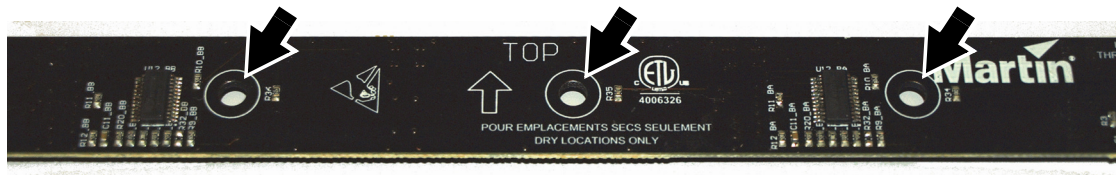


Figure 2: Mounting holes

See Figure 2. The VC-Strip can be fastened to a surface or structure by installing pillar bolts using any two of the mounting holes (arrowed).



Important! Read "Electrostatic discharge precautions" on page 6 before installing the VC-Strip.

Shortening 16x1 modules

It is possible to shorten a VC-Strip 16x1 module by cutting it at one of four possible cutting points (see **D** in Figure 1), leaving the module with 8, 10, 12 or 14 LEDs. Modules shortened in this way will communicate their length when they identify themselves to a P3 or RDM controller.

To cut a VC-Strip 16x1 module:

1. Ensure that the VC-Strip is isolated from power and data.
2. Read "Electrostatic discharge precautions" on page 6. Do not damage components or printed circuits.
3. See Figure 3. Using a small rotary cutting tool (Dremel or similar) with a fine-tooth cutting wheel, cut the VC-Strip along the dotted line at a cutting point.
4. The end of the VC-Strip without connectors cannot be re-used. Send it for electronic waste recycling.
5. Clean up the cut edge with fine-grit sandpaper.

VC-Strip 8x1 modules cannot be shortened.

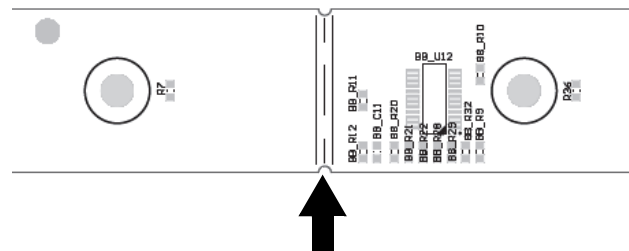


Figure 3: Cutting a VC-Strip

If you add shortened modules to a chain of 16x1 VC-Strip modules, do not exceed the maximum limit of 45 interconnected modules. However, if you create a chain of VC-Strip 16x1 modules in which *all the modules in the chain* have been shortened, or if you create a chain of VC-Strip 8x1 modules, you can increase the maximum permitted number of interconnected modules slightly from the limit of 45 for standard 16x1 modules as shown in Table 1:

Number of LEDs on VC-Strip modules in chain	Maximum number of modules in chain <i>provided that DC power output rating is not exceeded</i>
16	45
14	50
12	57
10	63
8	63

Table 1: Maximum length of VC-Strip chains



Warning! Table 1 gives the absolute maximum limit for the number of VC-Strip modules that can be linked in a chain, but lower limits apply if the Martin Tripix Power IP66™ or another external PSU is used to supply the chain with DC power. See the maximum limits listed under “Protection from electric shock” on page 4.

System installation



Warning! Read “Safety Information” on page 4 of this manual carefully before installing a VC-Strip™ system.

Warning! Connect the VC-Strip™ only to the devices and using only the Martin™ cables specified in this manual.

Warning! Do not exceed the maximum numbers of devices that can be connected and maximum cable lengths specified in this manual and the manuals of the other devices in the system.

Important! The VC-Strip is not designed to allow hot-plugging. Shut down power and data before connecting or disconnecting modules.

The VC-Strip is designed to display either Martin P3™ video or DMX-controlled lighting effects. It automatically recognizes and responds to either a Martin P3™ or a DMX data signal. The next sections explain how to create a VC-Strip installation to display P3 video data or DMX-controlled lighting effects.

Installing a P3 system

See Figure 5 for an overview of the elements and layout of a Martin P3™ video display system.

To install a system that displays P3 video on VC-Strips, see the overview in Figure 5 and follow these directions:

1. Make sure that no devices in the installation can be connected to AC mains power until all installation work is complete.
2. Read “Safety Information” on page 4 and “Electrostatic discharge precautions” on page 6.
3. Connect VC-Strips together in daisy-chained hybrid links using Martin™ hybrid PCB-to-PCB cables (see “VC-Strip to VC-Strip link cables” on page 26). Connect each cable from the THRU connector of one VC-Strip to the IN connector of the next VC-Strip (VC-Strip connectors are shown in “VC-Strip™ overview” on page 7) to create the daisy-chain.

Warning! Each daisy-chain that is connected to a Martin P3 PowerPort 1500™ may contain up to a maximum of forty-five (45) VC-Strip 16x1 modules or sixty-three (63) VC-Strip 8x1 modules. See Table 1 on page 9.

4. Connect each daisy-chain of VC-Strips to one of the four 4-pin female XLR hybrid (48 VDC power + P3 data) outputs on a P3 PowerPort 1500™ using a Martin™ hybrid 4-pin male XLR to PCB adapter cable, P/N 11840158 (see Figure 4).

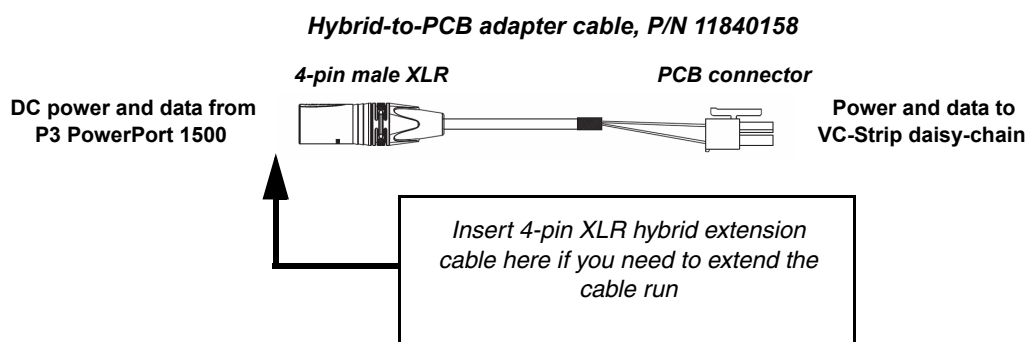


Figure 4: Power and P3 video data input

5. Depending on the distance from each VC-Strip daisy chain to the P3 PowerPort 1500, extend the cable run by connecting a Martin™ 4-pin XLR hybrid extension cable to the Hybrid-to-PCB adapter cable so that you bring the hybrid link to the P3 PowerPort 1500. Extension cables are available from Martin™ in various lengths. See “Extension cables” on page 26.
6. Create a P3 video data link from a Martin P3™ system controller such as the P3-100™, P3-200™ or P3 PC™ to a Martin P3 PowerPort 1500™ (see the products’ user manuals for details).

7. If required, continue the P3 video data link in a daisy-chain by connecting the P3 data throughput of one P3 PowerPort 1500™ to the P3 data input of the next P3 PowerPort 1500™, as described in the product's user manual.
8. When the P3 link and all VC-Strips are connected and you are ready to set up and test the installation:
 - Connect the P3 PowerPort 1500™ to AC mains power at 100 - 240 V, 50/60 Hz as described in the P3 PowerPort 1500™ user manual, then
 - connect the Martin P3 system controller to AC mains power and power the controller on.

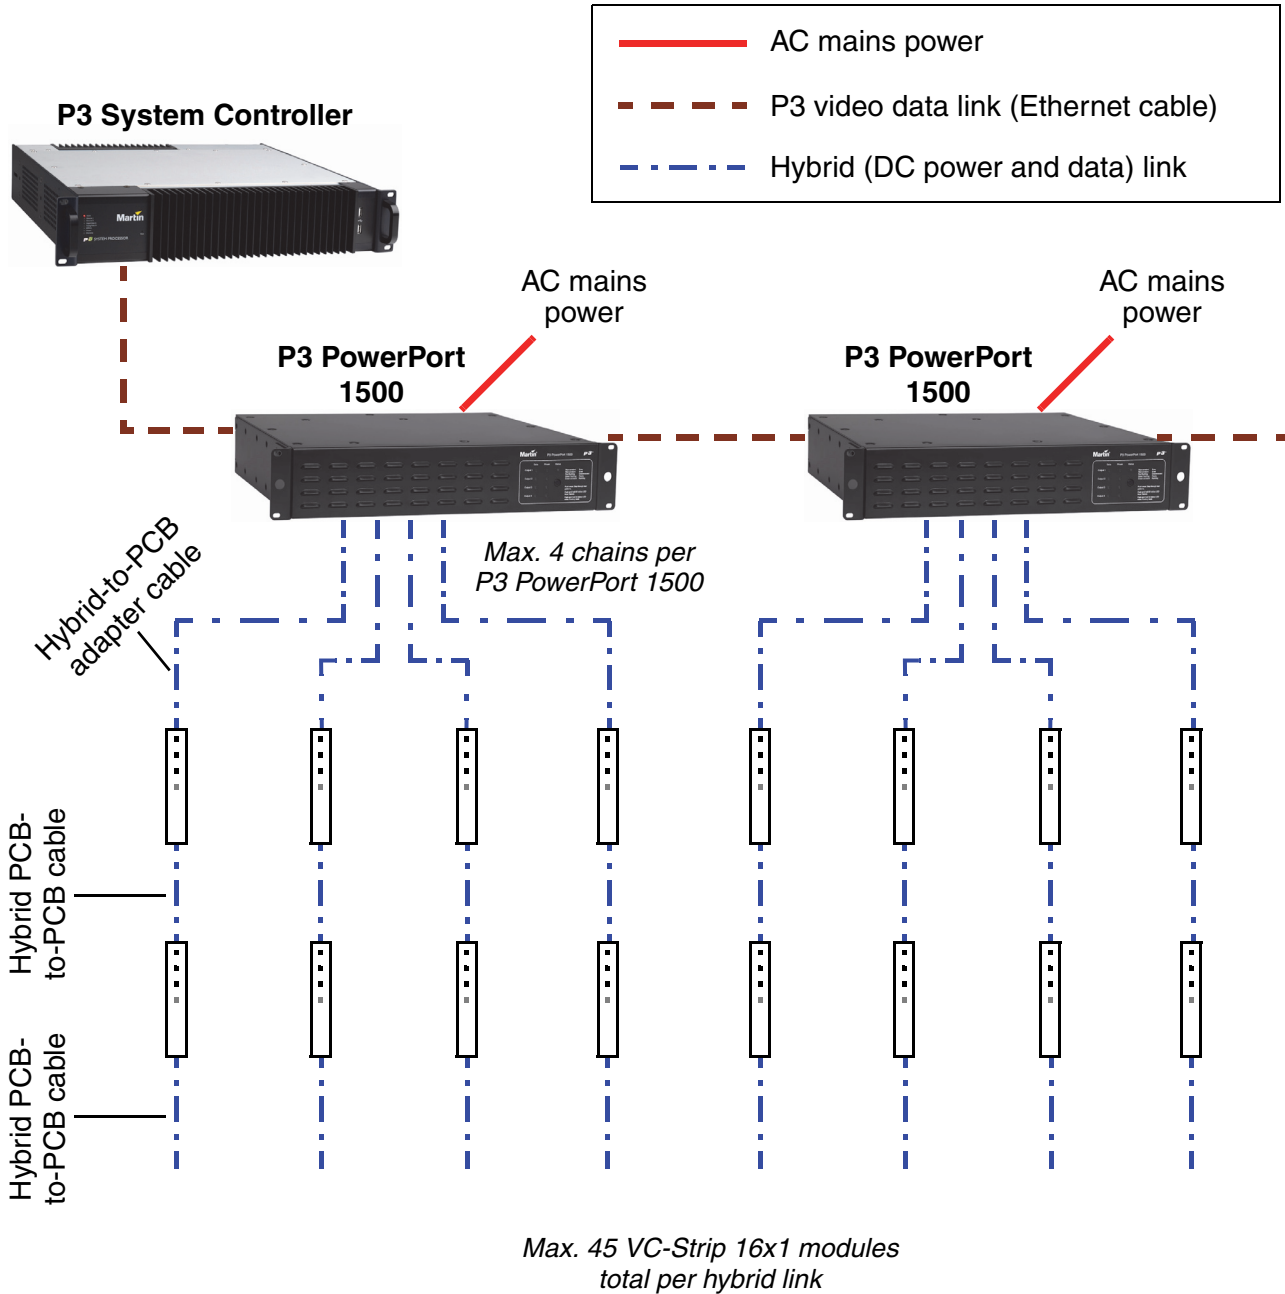


Figure 5: P3 system layout

Installing a DMX-controlled system

See Figure 9 for an overview of the elements and layout of a DMX-controlled lighting effect system.

The DMX link requires DMX cable. It can be maximum 300 m (1000 ft.) in length, but this can be extended using an RDM-compliant amplifier/splitter such as the Martin RDM 5.5 Splitter™ (P/N 90758150). The link must run in one single daisy-chain but you can split it into separate branches each time you insert an amplifier/splitter.

Alternatively, you can run the DMX signal from the controller over Ethernet cable using Artnet protocol and convert it to a standard DMX signal with a Martin Ether2DMX8™ DMX router (P/N 90758130).

If you would like assistance with creating a DMX link, your Martin™ supplier will be glad to advise.

The number of VC-Strips you can include on one DMX link is limited by the number of DMX channels the VC-Strips will use and the 512 DMX channels available in one DMX universe at the DMX controller. Each time you have used 512 channels, you must create a new DMX link that is connected to a new DMX universe on the controller. Note that this limit applies to the *DMX link*. The maximum safety limits that apply to the *hybrid link* (see “Safety Information” on page 4) take priority and must be respected in all cases.

To install a system that displays DMX-controlled lighting effects on VC-Strips, see the overview in Figure 9. and follow these directions:

1. Make sure that no devices in the installation can be connected to AC mains power until all installation work is complete.
2. Read “Safety Information” on page 4 and “Electrostatic discharge precautions” on page 6.
3. Connect VC-Strips together in daisy-chained hybrid links using Martin™ hybrid PCB-to-PCB cables (see “VC-Strip to VC-Strip link cables” on page 26). Connect each cable from the THRU connector on one VC-Strip to the IN connector on the next VC-Strip (VC-Strip connectors are shown in “VC-Strip™ overview” on page 7).

Warning! Each VC-Strip hybrid link may contain up to *the lower of* these three limits:

- either a maximum of forty-five (45) VC-Strip 16x1 modules,
- or a maximum of thirty (30) VC-Strip 16x1 modules when drawing DC power from a Martin Tripix Power IP66™ PSU,
- or the maximum number of VC-Strips that can be interconnected without exceeding the power rating of the PSU output used when drawing power from any other external 48 VDC PSU.

Hybrid-to-PCB adapter cable, P/N 11840158

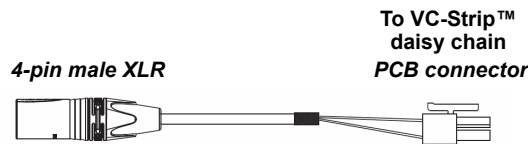


Figure 6: Power and DMX data input to a VC-Strip daisy-chain

4. See Figure 6. Connect a Martin™ hybrid-to-PCB adapter cable (P/N 11840158) to the first VC-Strip of each hybrid link.
5. Depending on the distance from each VC-Strip daisy chain to the DMX controller and PSU, extend the cable run by connecting a Martin™ 4-pin XLR hybrid extension cable to the Hybrid-to-PCB adapter cable so that you bring the hybrid link to the controller and PSU. Extension cables are available from Martin™ in various lengths. See “Extension cables” on page 26.

6. Connecting to 48 VDC power depends on whether you are using a Martin Tripix Power IP66™ PSU or a generic 48 VDC PSU such as the Mean Well SP-480 48 as a DC power source:
 - If you are using a **Martin™ Tripix Power IP66 PSU**, see Figure 7 below. Connect the power input connector of a Martin™ Tripix Power IP66 hybrid lead-in cable (P/N 11840194) to the DC output on the Tripix Power IP66.

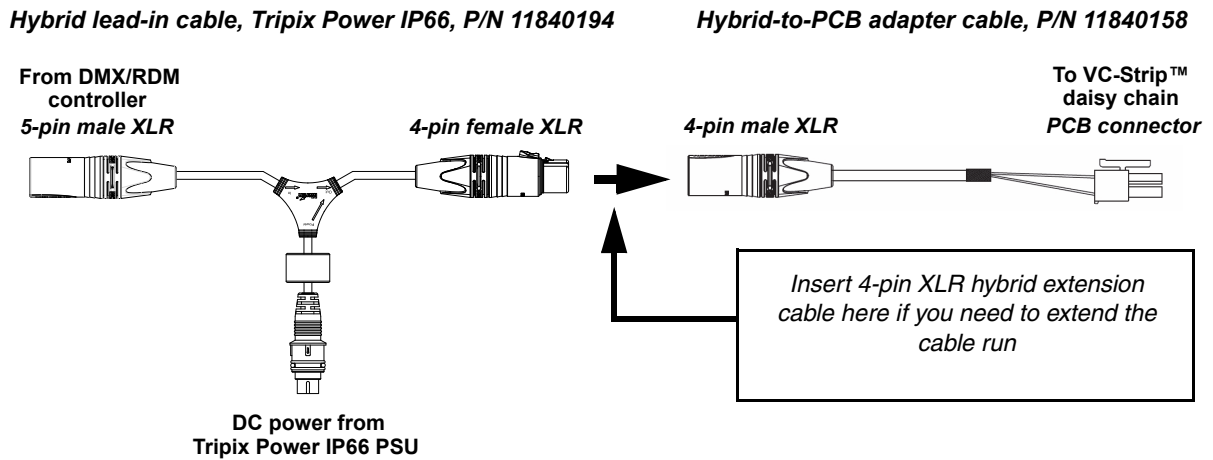


Figure 7: Tripix Power IP66 PSU and DMX input

- If you are using a **generic external PSU**, see Figure 8 below. Connect the two DC power wires on a Martin™ hybrid lead-in cable (P/N 11840171) to a DC output on the PSU. Connect the white wire to positive (+ve) and the black wire to negative (-ve).

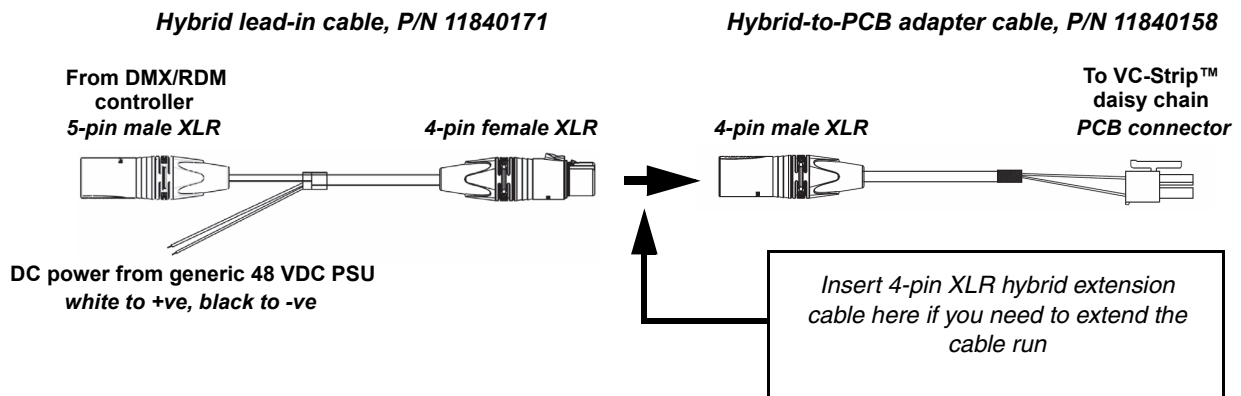


Figure 8: Generic PSU and DMX input

7. Then connect the 4-pin female XLR connector on the hybrid lead-in cable to the 4-pin male connector on the hybrid-to-PCB adapter cable or hybrid extension cable that you prepared under points 4. and 5. above.
8. Finally, connect the 5-pin male XLR connector on the hybrid lead-in cable to an RDM-compliant DMX controller such as the Martin M1™ or M-PC™.
In larger installations, insert a DMX/RDM Splitter such as the Martin 5.5 RDM Splitter™, P/N 90758150, between the controller and the hybrid lead-in cable if you need to split the DMX link into branches.
9. When the DMX link, 48 VDC power link and all VC-Strips are connected and you are ready to set up and test the installation:
 - Connect the Tripix Power IP66 or external PSU to AC mains power as described in its user manual, then
 - connect the DMX controller to AC mains power and power the controller on. You can now begin setup.

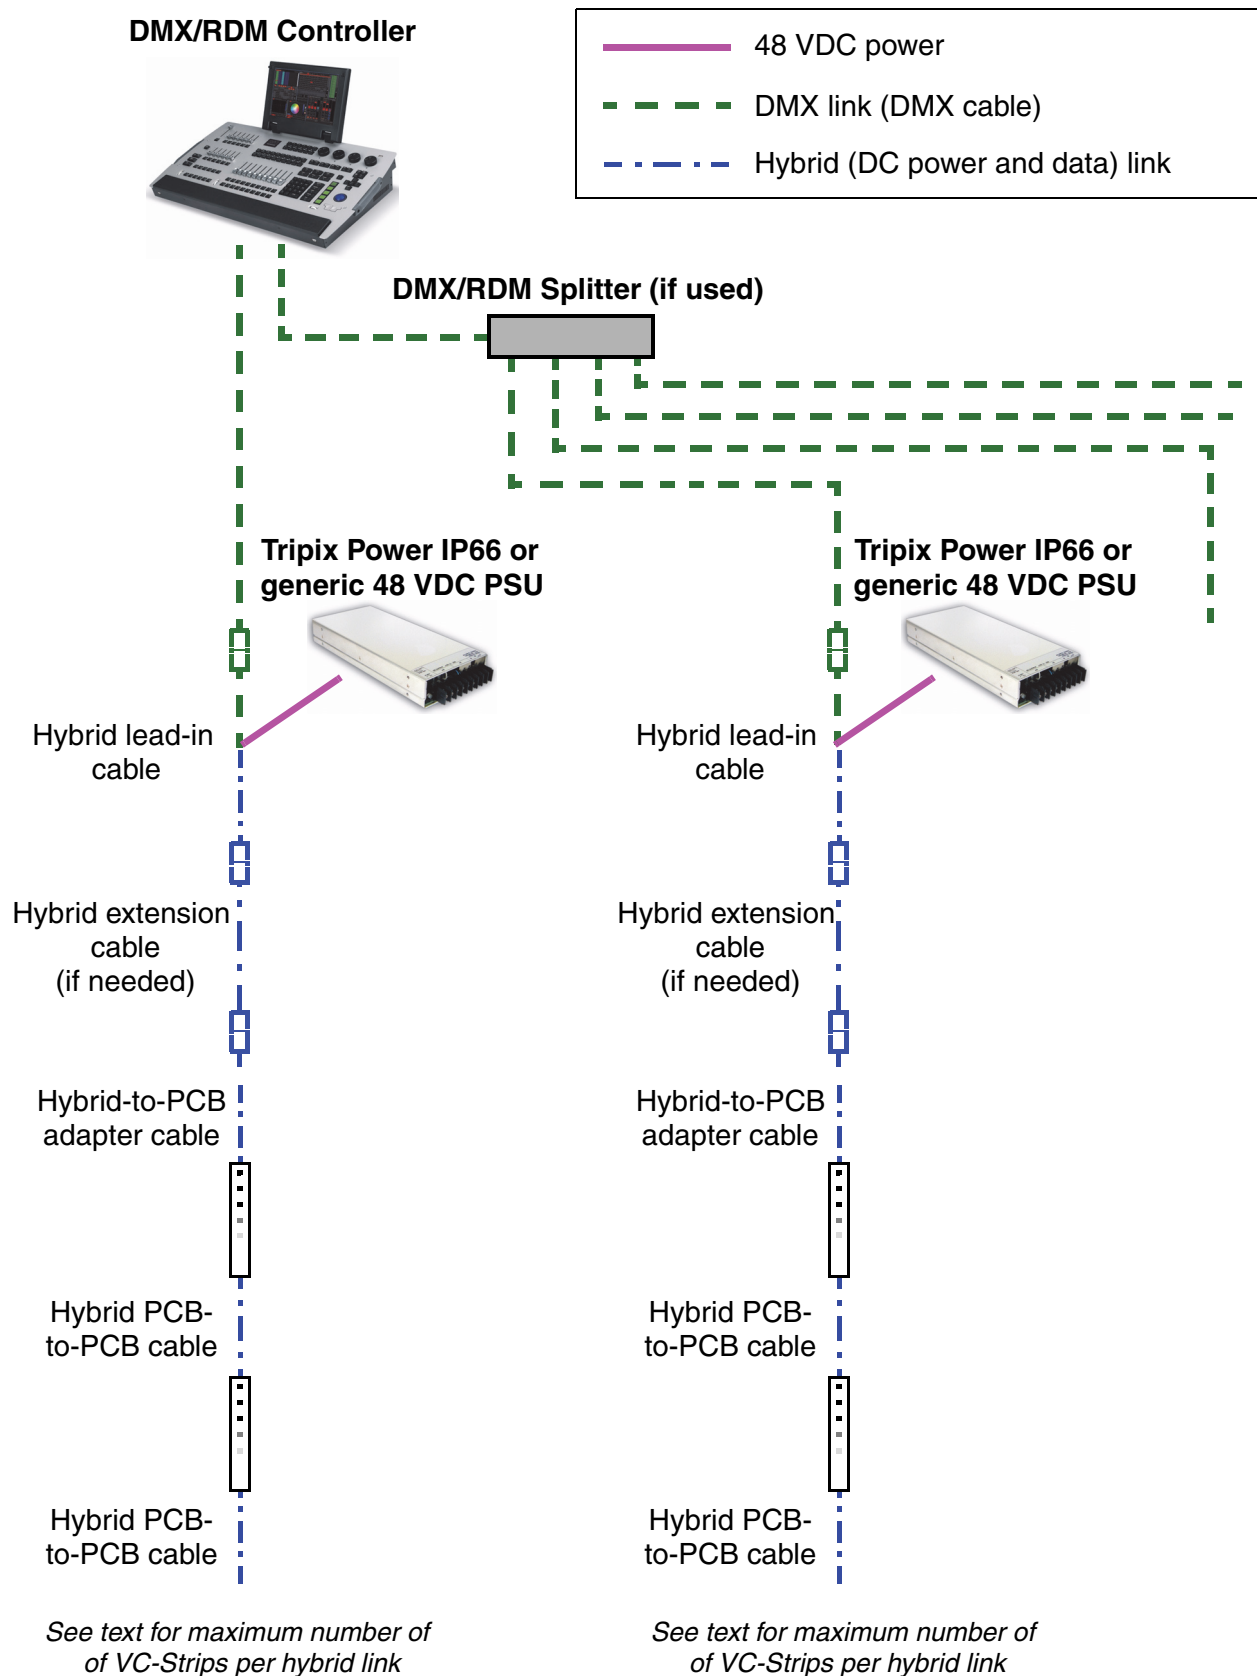


Figure 9: DMX system layout

Connecting additional devices to a VC-Strip chain

Drawing off combined data and DC power from the end of a chain

If you want to continue the hybrid link to carry 48 VDC power and a P3 video or DMX signal from the end of a VC-Strip chain to other devices, connect a Martin Hybrid Adapter Cable, PCB to 4-pin female XLR, P/N 11840159, to the **OUT** connector of the last module in the chain.



Warning! If you draw off DC power from the end of a VC-Strip chain and connect additional devices, respect the maximum safe power rating of the power source that you use to supply all the devices with DC power. Calculate the power consumption of the VC-Strip chain, allowing 8 W per VC-Strip 16x1 25™ module and 4 W per VC-Strip 8x1 25™ module, then add the power consumption of each device that you add to the end of the chain. As soon as you reach 360 W – or the maximum power rating of the device that you use to supply the chain with DC power if this rating is lower than 360 W – you must stop adding devices and create a new chain that draws DC power from a new source.

Drawing off a DMX signal from the end of a chain

If you want to continue the DMX link to carry a DMX signal from the end of a VC-Strip chain to other devices, connect a Martin Hybrid Adapter Cable, PCB to 4-pin female XLR, P/N 11840159, and a Martin Data Output/Thru Adapter Cable 4-pin male XLR to 5-pin female XLR, P/N 11840203, to the **OUT** connector of the last module in the chain.

System setup



Warning! Before applying power to the VC-Strip:

- **Carefully review the safety information starting on page 4**
- **Check that the installation is safe and secure.**

Setting up for P3 display

A Martin P3™ system allows video to be displayed on an installation that consists of or includes VC-Strip devices. When a P3 controller is connected to the data link and the installation is powered on, you can set up all the devices on the link from the P3 controller. See the P3 controller user manual for details.

Setting up for DMX control

A DMX system gives 0 - 100% variable intensity control. Varying the intensity of red, blue and green LEDs in RGB products provides RGB color mixing.

You can set up and control a VC-Strip installation over the data link using an RDM-compatible DMX controller such as the Martin M-PC™ Windows application (running on a PC connected to a USB/DMX interface such as the Martin USB Duo™ DMX Interface) or the Martin M1™ DMX/RDM control console. The interface on the Martin M1™ monitor screen is basically identical to the Martin M-PC™ interface.

DMX control channels

DMX controllers send control data on DMX control channels in DMX universes. One DMX universe has 512 channels available. RGB control of each individually controlled element in an installation requires three channels, white intensity control requires one channel.

A VC-Strip installation can be controlled as groups of pixels or as individual pixels:

- A group can consist of an entire installation, any part of an installation or a single VC-Strip module. In grouped control, all the LEDs in one group are controlled using the same DMX channels – three channels for RGB products and one channel for WW, MW and CW products.
- If VC-Strips are set up for individual pixel control, each of the 16 LEDs on a module is controlled by its own DMX channels.

A VC-Strip installation uses the number of DMX channels required by the group or pixel (three channels for RGB and one channel for WW, MW or CW) multiplied by the total number of groups or pixels in the installation. For example, an installation with fifty RGB modules will require:

- 3 DMX channels if the entire installation is controlled as one group,
- 3 channels x 10 groups = 30 DMX channels if the installation is divided into ten groups that are controlled individually,
- 3 channels x 50 modules = 150 DMX channels if each of the fifty modules is controlled as an individual group, and
- 3 channels x 50 modules x 16 pixels = 2400 DMX channels if each of the 800 pixels is controlled individually (in this example, five DMX universes will be required because one DMX universe has 512 channels).

Individual and grouped control can be mixed freely in an installation. For example, some VC-Strip modules can be set up for individual pixel control, other modules can be set up for individual module control, and other modules can be put into groups for grouped control of multiple modules.

DMX addresses

The system must be set up so that each individually controlled group or pixel receives instructions from the DMX controller on its own DMX channels. The DMX address, also known as the control address or start channel, is the first of these channels. If a unit uses more than one channel, it uses the DMX address channel and the channels immediately above it. For example, one VC-Strip RGB module controlled as one group and set to DMX address 1 will use DMX channels 1 - 3. Channel 4 will be available for use as a DMX address for the next device.

If a VC-Strip module is set to individual pixel control (see “Setting modules to grouped or pixel control modes” on page 18), LEDs are given DMX addresses using a ‘left-to-right’ numbering system. For example, if one VC-Strip RGB module is set to pixel control and set to DMX address 1, each of the 16 LEDs will use 3 channels, and the module will use DMX channels 1 - 48 (Channel 1 -3 for the first pixel, channels 4 - 6 for the next pixel etc. until it reaches channels 46 - 48 for the last pixel. Channel 49 will be available for use as a DMX address for the next device.

If a VC-Strip module is set to module control (see “Setting modules to grouped or pixel control modes” on page 18), it can be controlled as an individual module or assigned to a group of modules. To create a group of modules, give them the same DMX address. All modules that have the same DMX address will receive the same instructions and behave identically.

Setting up via RDM using Martin M-PC™

Using an RDM-compliant DMX controller such as Martin M-PC™, you can communicate with the VC-Strip modules on the DMX data link via RDM. You can:

- Retrieve data
- Set the DMX addresses of the groups or pixels on the link
- Apply various setup options.

To use Martin M-PC, connect a PC running this application to the data link using the Martin USB Duo™ USB/DMX interface box.

See Figure 10. Open the **RDM View** window in M-PC and click on the **Scan** button (arrowed bottom left) to display a list of the RDM-compliant devices on the DMX/RDM data link (in this example, ten VC-Strip RGB modules are present on the link, and all ten modules are set to DMX address 1).

Identifying VC-Strips in the installation

To see which VC-Strip module in this list corresponds to which VC-Strip module in the installation, click on each VC-Strip module in the list once to select it, then click on the **Identify** button at the bottom of the screen. The VC-Strip in the installation that corresponds to the selected VC-Strip in the list will flash a signal so that you can identify it.

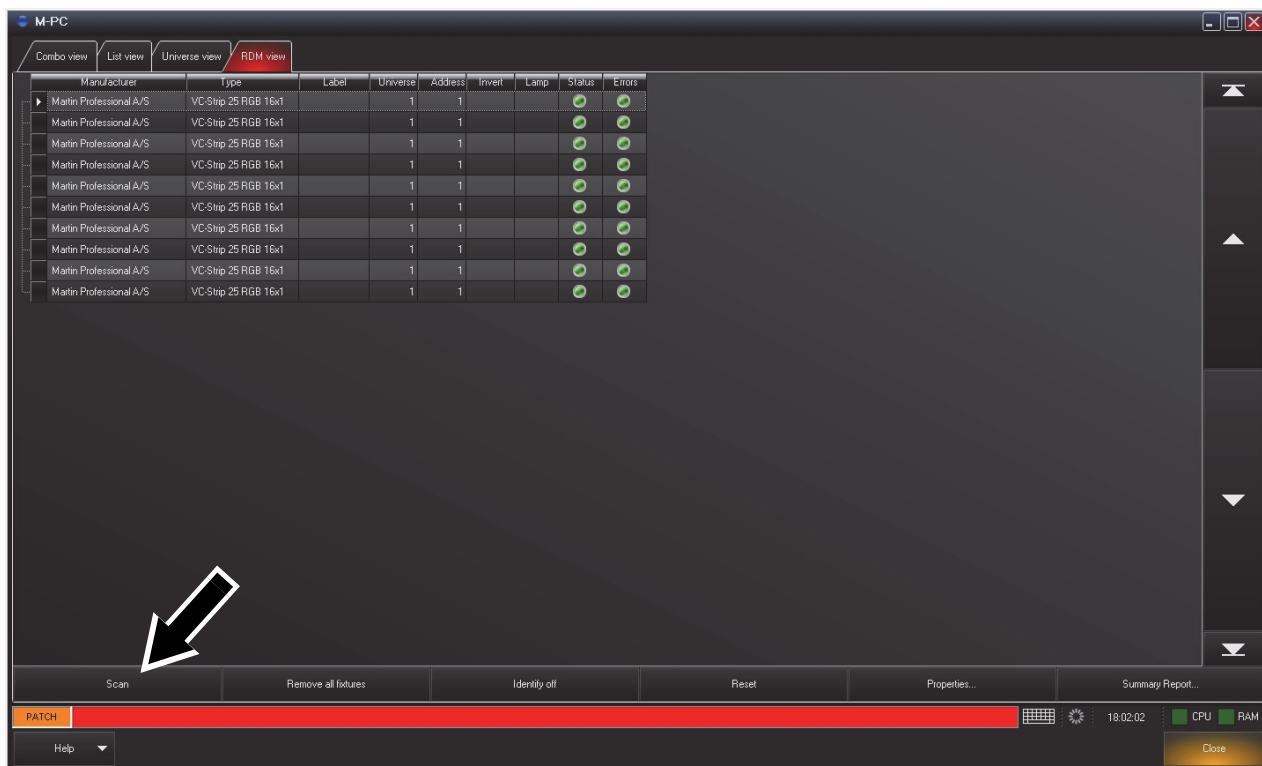


Figure 10: M-PC RDM View

Setting DMX Addresses

See Figure 10. To set DMX addresses using the M-PC application, open the **RDM View** window and click on **Scan** to display a list of the elements in the installation. Click in the **Address** box for each VC-Strip module and enter the desired DMX address, then press the **Enter** key to store the DMX address for that module. Remember that modules with identical addresses will receive the same instructions.

When working with more than one DMX universe, click in the **Universe** box for each VC-Strip module, enter the desired DMX universe number, then press the **Enter** key to store the DMX universe for that module.

Setting modules to grouped or pixel control modes

In pixel mode, the 16 LEDs on a module are controlled individually. In module mode, All the LEDs on one module are controlled as one group.

To set a VC-Strip module to pixel or module mode, calibrated or raw, using M-PC, open the **RDM View** window and click on **Scan** to display a list of the elements in the installation. Select the module in the list, then click on the **Properties...** button at the bottom of the screen to open the Properties window for that module. Select from:

- Pixel mode (calibrated)
- Module mode (calibrated)
- Pixel mode (raw)
- Module mode (raw)

Calibrated and raw modes

See the section on setting control modes above.

In *calibrated* mode, color and intensity levels are evenly matched in different LEDs and different modules but maximum output is slightly reduced.

In *raw* mode, LEDs give maximum possible output but color and intensity levels may be slightly uneven in different LEDs and different modules.

Setting up shortened modules

Any VC-Strip that has been shortened by cutting the module will communicate the number of LEDs it contains to the P3 or RDM controller so that its 14, 12, 10 or 8 pixels can be controlled correctly.

Using the VC-Strip



Warning! Before applying power to the VC-Strip:

- **Carefully review the safety information starting on page 4**
- **Check that the installation is safe and secure.**

Do not use the VC-Strip if the ambient temperature exceeds 45° C (113° F) or falls below -20° C (-4° F).

P3 display

The VC-Strip will display video from all common video sources that is processed and sent via a Martin P3™ controller. See the P3 controller documentation for details.

DMX control

The VC-Strip will display effects controlled by DMX. An RDM-compatible controller is strongly recommended, as RDM allows two-way communication. See the DMX/RDM controller documentation for details.

Local control button

The small control button on the back of the VC-Strip (see Figure 1 on page 7) lets you display the product's status, test the LEDs and reset the VC-Strip.

Status display

To display a VC-Strip module's status, press the control button once. LEDs 1 - 4 will give one of the indications listed in the tables below for a few seconds.

VC-Strip RGB

Color	Output	Indication	Action required
Blue	Constant	Busy (e.g. booting up or writing to flash memory).	Wait a moment for normal operation to be resumed.
Red	Constant	Error. The VC-Strip has encountered a fatal error and can not run.	Perform a factory reboot, followed by a firmware upload.
Red	Flashing	No control source detected.	Connect a P3 system controller or DMX source to the network.
Green	Flashing	Ready. VC-Strip connected to P3 controller but not receiving valid P3 data stream.	Set up the P3 controller to use the VC-Strip.
Green	Constant	Running normally in P3 mode.	None.
Cyan	Flashing	Ready. VC-Strip connected to DMX controller but not receiving valid DMX data stream.	Set up the DMX controller to use the VC-Strip.
Cyan	Constant	Running normally in DMX mode.	None.

Table 2: RGB models status information

VC-Strip CW, MW and WW

LEDs	Output	Indication	Action required
LEDs 1 and 3	Constant	Busy (e.g. booting up or writing to flash memory).	Wait a moment for normal operation to be resumed.
LED 1	Constant	Error. The VC-Strip has encountered a fatal error and can not run.	Perform a factory reboot, followed by a firmware upload.
LED 1	Flashing	No control source detected.	Connect a P3 system controller or DMX source to the network.
LEDs 1 and 2	Flashing	Ready. VC-Strip connected to P3 controller but not receiving valid P3 data stream.	Set up the P3 controller to use the VC-Strip.
LEDs 1 and 2	Constant	Running normally in P3 mode.	None.
LEDs 1, 2 and 3	Flashing	Ready. VC-Strip connected to DMX controller but not receiving valid DMX data stream.	Set up the DMX controller to use the VC-Strip.
LEDs 1, 2 and 3	Constant	Running normally in DMX mode.	None.

Table 3: White models status information

Testing, rebooting and returning to defaults

The tables below list the functions of the control button on each VC-Strip module.

Test patterns are stored in onboard memory. This lets you test the LEDs without an external controller, but test patterns can also be called up on P3 system controllers and the P3 PowerPort 1500™.

VC-Strip RGB

Button action	Function
Short press	The first press displays status as shown in Table 2 for a few seconds. The next presses display the following test patterns on the LEDs (one short press scrolls to next pattern): <ul style="list-style-type: none">- Calibrated white- Full red- Full green- Full blue- Scrolling gradient
Press and hold until LEDs 1-4 light blue	Reboot the VC-Strip.
Press and hold until LEDs 1-4 light white	Return the VC-Strip to its default factory firmware.

Table 4: RGB models control button functions

VC-Strip CW, MW and WW

Button action	Function
Short press	The first press displays status as shown in Table 3 for a few seconds. The next presses display the following test patterns on the LEDs (one short press scrolls to next pattern): <ul style="list-style-type: none">- Calibrated white 100%- White 33%- White 33%- White 33%- Scrolling gradient
Press and hold until LEDs 1, and 3 light	Reboot the VC-Strip.
Press and hold until LEDs 1, 2, 3 and 4 light	Return the VC-Strip to its default factory firmware.

Table 5: White models control button functions

Service and maintenance



Warning! Read “Safety Information” on page 4 before carrying out service on the VC-Strip.

Warning! Isolate the installation from AC mains power before servicing.

Warning! Refer any service operation not described in this manual to a qualified service technician.



Important! Read “Electrostatic discharge precautions” on page 6 before carrying out service on the VC-Strip.

Important! Excessive dust buildup causes overheating and a risk of short-circuits and will damage the product. Damage caused by inadequate cleaning is not covered by the product warranty.

The user will need to clean the VC-Strip periodically. All other service operations on the VC-Strip must be carried out by Martin Professional™ or its approved service agents.

Installation, on-site service and maintenance can be provided worldwide by the Martin Professional Global Service organization and its approved agents, giving owners access to Martin’s expertise and product knowledge in a partnership that will ensure the highest level of performance throughout the product’s lifetime. Please contact your Martin supplier for details.

Cleaning

Cleaning schedules vary greatly depending on the operating environment. It is therefore impossible to specify precise cleaning intervals for the VC-Strip. In extreme cases, the product may require cleaning after surprisingly few hours of operation. Environmental factors that may result in a need for frequent cleaning include:

- Use of smoke or fog machines.
- High airflow rates (near air conditioning vents, for example).
- Presence of cigarette smoke.
- Airborne dust (from stage effects, building structures and fittings or the natural environment in outdoor locations, for example).

If one or more of these factors is present, inspect products soon after installing them to see whether cleaning is necessary. Check again at frequent intervals. This procedure will allow you to assess cleaning requirements in your particular situation. If in doubt, consult your Martin™ dealer about a suitable maintenance schedule.

Important! *Electrostatic discharges may cause damage. Do not touch the VC-Strip with fingers or a compressed air nozzle.*

To clean the product, use low-pressure compressed air to gently remove dust and loose particles from the front and back of the product. Avoid touching the product’s conductive surfaces and electronic components.

Installing new software

It may be necessary to upload new software (i.e. device firmware) to the VC-Strip if it appears to have a software-related fault or if you want to update to a newer software version.

Software for Martin™ products is available from the Martin website. The VC-Strip software can be installed from the P3 System Controller over the P3 data link. See the P3 System Controller user manual for software installation instructions.

Troubleshooting

Problem	Probable cause(s)	Remedy
Control is lost and pressing control button causes VC-Strip to show constant or flashing red status indication.	Error has occurred.	Check that system is correctly connected, set up and running. Hold control button pressed in until it turns blue, then release, to reboot VC-Strip. Restart P3 or DMX controller.
Product is completely dead.	No DC power to product.	Check 48 VDC power supply and cables
	Internal fault.	Disconnect from power. Do not attempt repairs yourself. Contact Martin™ Service or an authorized Martin™ service partner for assistance.
VC-Strip does not display as intended.	Bad 48 VDC power transmission.	Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.
	Bad data transmission.	Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.
	Incorrect mapping or addressing of products.	Check product address and controller settings.
	Product in installation is defective and is disturbing data transmission.	Substitute known good products one at a time until normal operation is regained. Have faulty product serviced by Martin™ Service.

Table 6: Troubleshooting

Specifications

Physical

VC-Strip 16x1 25™

Length	399 mm (15.7 in.)
Width	20 mm (0.8 in.)
Height	18 mm (0.7 in.)
Weight	43 g (1.5 oz.)

VC-Strip 8x1 25™

Length	199 mm (7.9 in.)
Width	20 mm (0.8 in.)
Height	18 mm (0.7 in.)
Weight	26 g (0.9 oz.)

Control and programming

Control options	Martin™ P3 System Controller (via Martin P3 PowerPort 1500™) or DMX
Protocol detection	Automatic
Control modes	Calibrated and raw, pixel and module
DMX channels (RGB, Pixel mode)	48 (16x1 model); 24 (8x1 model)
DMX channels (RGB, Module mode)	3 (all models)
DMX channels (WW, MW and CW, Pixel mode)	16 (16x1 model); 8 (8x1 model)
DMX channels (WW, MW and CW, Module mode)	1 (all models)
Setting and addressing	P3 System controller or RDM-compliant controller
Control resolution	16-bit (P3) or 8-bit (DMX) control of each color
Color and intensity calibration	Pixel-level
Video signal compliance	Martin P3™ proprietary protocol
DMX compliance	USITT DMX512-A
RDM compliance	ANSI/ESTA E1.20
Firmware update	Via P3 System Controller

Optics

Minimum LED lifetime	50 000 hours (to >70% luminous output)*
----------------------	---

**Manufacturer's figure obtained under manufacturer's test conditions*

Control/user interface

Device status	Multi-color visual indication
Device test	Control pushbutton on rear calls up local test patterns
Device reset	Control pushbutton on rear

Video processing

Brightness control
Gamma correction and control
Color temperature control
Calibration processing
Synchronization

Photometric Data

Pixels per module	16 (16x1 model); 8 (8x1 model)
Viewing angle	120° x 120°
Color temperature, WW	2700 K
Color temperature, MW	4000 K
Color temperature, CW	6500 K

Output

Luminous intensity, RGB, calibrated mode	4000 Nit
Luminous intensity, RGB, raw mode	5000 Nit
Luminous intensity, WW, calibrated mode	8500 Nit
Luminous intensity, WW, raw mode	10 000 Nit
Luminous intensity, MW, calibrated mode	8500 Nit
Luminous intensity, MW, raw mode	10 000 Nit
Luminous intensity, CW, calibrated mode	8500 Nit
Luminous intensity, CW, raw mode	10 000 Nit

Preliminary data, figures are approximate

System Integration

P3 PowerPort 1500™	P/N 90721040
--------------------	--------------

See www.martin.com for latest information.

Construction

Base	Black FR4 circuit board
Protection rating	IP20
RoHS compliant	

Installation

Orientation	Any
Maximum number of VC-Strip 16x1 25™ modules per daisy-chain	45
Maximum number of VC-Strip 8x1 25™ modules per daisy-chain	63
Mounting method	Mounting holes in module
Minimum clearance around front surface	10 mm (0.4 in.)

Connections

Power & data input	4-pin Molex male PCB connector
Power & data thru	4-pin Molex female PCB connector

Electrical

Nominal input voltage	48 VDC from Martin P3 PowerPort 1500™ or external PSU
Peak power consumption (at full intensity, full white)	8 W (16x1 model); 4 W (8x1 model)
Typical power consumption (with typical video content)	3 W (16x1 model); 1.5 W (8x1 model)

Figures for typical video content are indicative only and will vary

Power consumption figures include cable and assume a 50 m chain

Thermal

Cooling	Convection
Maximum ambient temperature (Ta max.)	45° C (113° F)
Minimum ambient temperature (Ta min.)	-20° C (-4° F)
Peak heat dissipation (calculated, at full intensity, full white)	16x1 model 28 BTU/hr.; 8x1 model 14 BTU/hr.
Typical heat dissipation (calculated, with typical video content)	16x1 model 11 BTU/hr.; 8x1 model 5.5 BTU/hr.

Figures for typical video content are indicative only and will vary

Approvals



EU safety	EN 60950-1
EU EMC	EN 55103-1, EN 55103-2, EN 55022, EN 55024, EN 61000-3-2, EN 61000-3-3
US safety (pending)	UL 60950-1
US EMC (pending)	FCC Part 15 Class A
Canadian safety (pending)	CSA C22.2 No. 60950-1
Canadian EMC (pending)	ICES-003 Class A
Australia/NZ	C-Tick N4241

Accessories

VC-Grid™ and VC-Strip™ Mounting Frames, set of 10 P/N 91611370

Input cables

Hybrid Input Cable, 4-pin male XLR to PCB connector, 0.25 m (0.8 ft.) P/N 11840158

Hybrid DC Lead-in Cable, 5-pin male XLR + two cable
tails to 4-pin female XLR, 0.25 m (0.8 ft.) P/N 11840171

Hybrid DC Lead-in Cable, 5-pin male XLR + Tripix Power
IP66 to 4-pin female XLR, 0.25 m (0.8 ft.) P/N 11840194

VC-Strip to VC-Strip link cables

Hybrid Link Cable, PCB to PCB, 200 mm (7.9 in.) P/N 11840160

Hybrid Link Cable, PCB to PCB, 400 mm (15.7 in.) P/N 11840161

Hybrid Link Cable, PCB to PCB, 600 mm (23.6 in.) P/N 11840162

Hybrid Link Cable, PCB to PCB, 800 mm (31.5 in.) P/N 11840163

Hybrid Link Cable, PCB to PCB, 1000 mm (39.4 in.) P/N 11840157

Extension cables

Hybrid 4-pin XLR Extension Cable, 1 m (3.3 ft.) P/N 11821016

Hybrid 4-pin XLR Extension Cable, 2.5 m (8.2 ft.) P/N 11821017

Hybrid 4-pin XLR Extension Cable, 5 m (16.4 ft.) P/N 11821018

Hybrid 4-pin XLR Extension Cable, 10 m (32.8 ft.) P/N 11821019

Hybrid 4-pin XLR Extension Cable, 25 m (82.0 ft.) P/N 11821015

Output / throughput cables

Hybrid Output/Thru Cable, PCB to 4-pin female XLR, 0.25 m (0.8 ft.) P/N 11840159

Data Output/Thru Cable, 4-pin male XLR to 5-pin female XLR, 0.25 m (0.8 ft.) P/N 11840203

Hybrid cables carry both DC power and data over separate conductors.

Related Items

Martin P3 PowerPort 1500™ P/N 90721040

Martin P3-100™ System Controller P/N 90721010

Martin P3-200™ System Controller P/N 90721020

Martin P3-PC™ System Controller P/N 90721030

Martin Tripix Power IP66™ Power Supply Unit P/N 90760330

See www.martin.com for latest information

Ordering information

VC-Strip 16x1 25™ RGB P/N 90357290

VC-Strip 16x1 25™ WW P/N 90357280

VC-Strip 16x1 25™ MW P/N 90357310

VC-Strip 16x1 25™ CW P/N 90357300

VC-Strip 8x1 25™ RGB P/N 90357320

VC-Strip 8x1 25™ WW P/N 90357330

VC-Strip 8x1 25™ MW P/N 90357340

VC-Strip 8x1 25™ CW P/N 90357350

Specifications subject to change without notice. For the latest product specifications, see www.martin.com

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canadian Interference-Causing Equipment Regulations - *Règlement sur le Matériel Brouilleur du Canada*

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.
Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le Matériel Brouilleur du Canada.



Disposing of this product

Martin™ products are supplied in compliance with Directive 2002/96/EC of the European Parliament and of the Council of the European Union on WEEE (Waste Electrical and Electronic Equipment), as amended by Directive 2003/108/EC, where applicable.

Help preserve the environment! Ensure that this product is recycled at the end of its life. Your supplier can give details of local arrangements for the disposal of Martin products.



www.martin.com • Olof Palmes Allé 18 • 8200 Aarhus N • Denmark
Tel: +45 8740 0000 • Fax +45 8740 0010